

Description:


When 5 chargers work on the same time, the total consumption is 120A, higher than fuse box 160A, the fuse will blown.

2

Total consumption:
116A



Fuse box: 120A

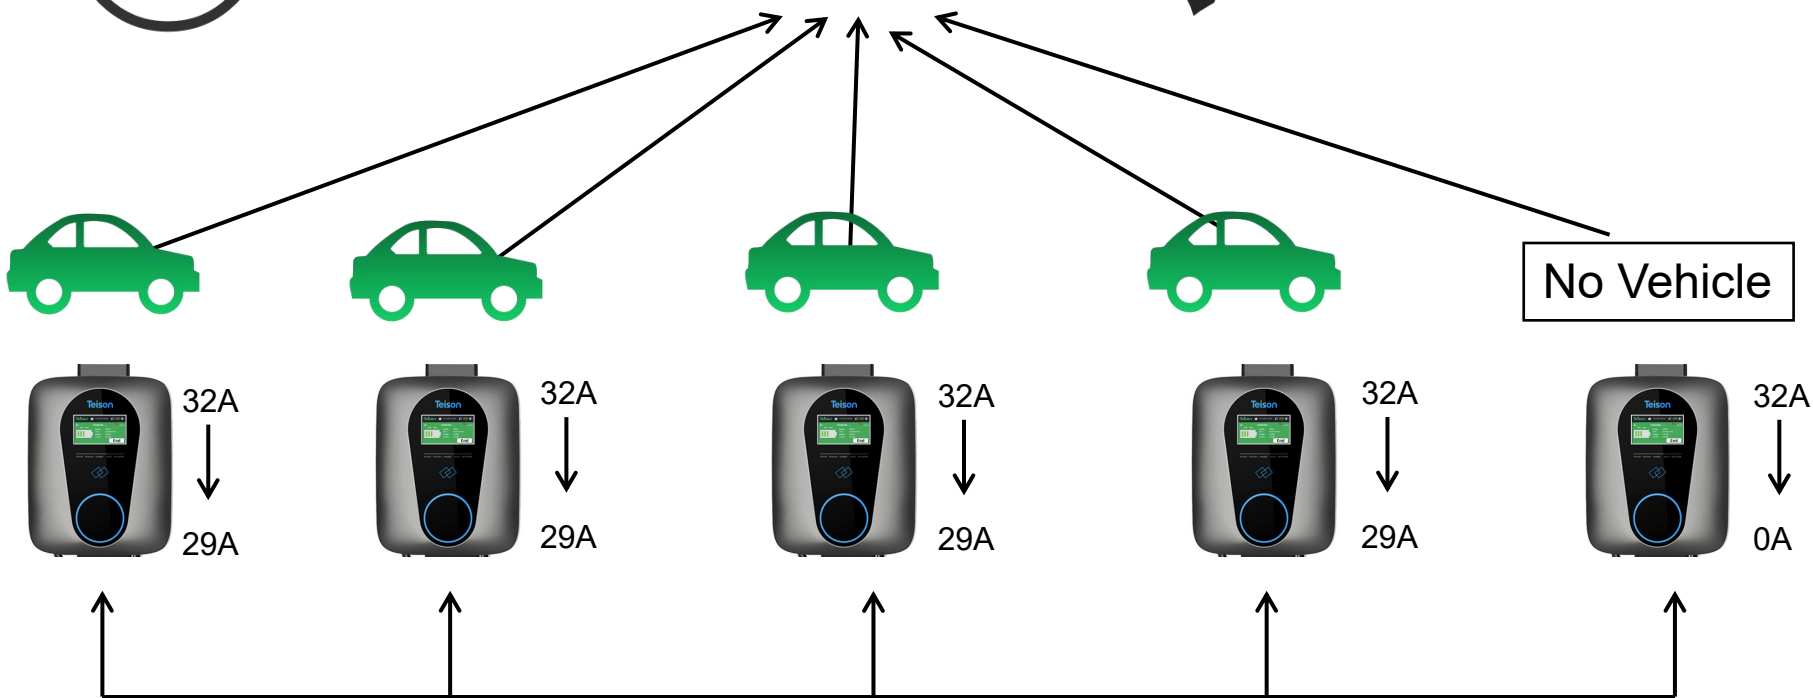

Description:
When 4 cars come to charge, the charger will change reduce to 29A automatically.




Junction Box (Control Dynamic load balance)
(Maximum charger: 20pcs)

3

Total consumption:
115A



Fuse box: 120A

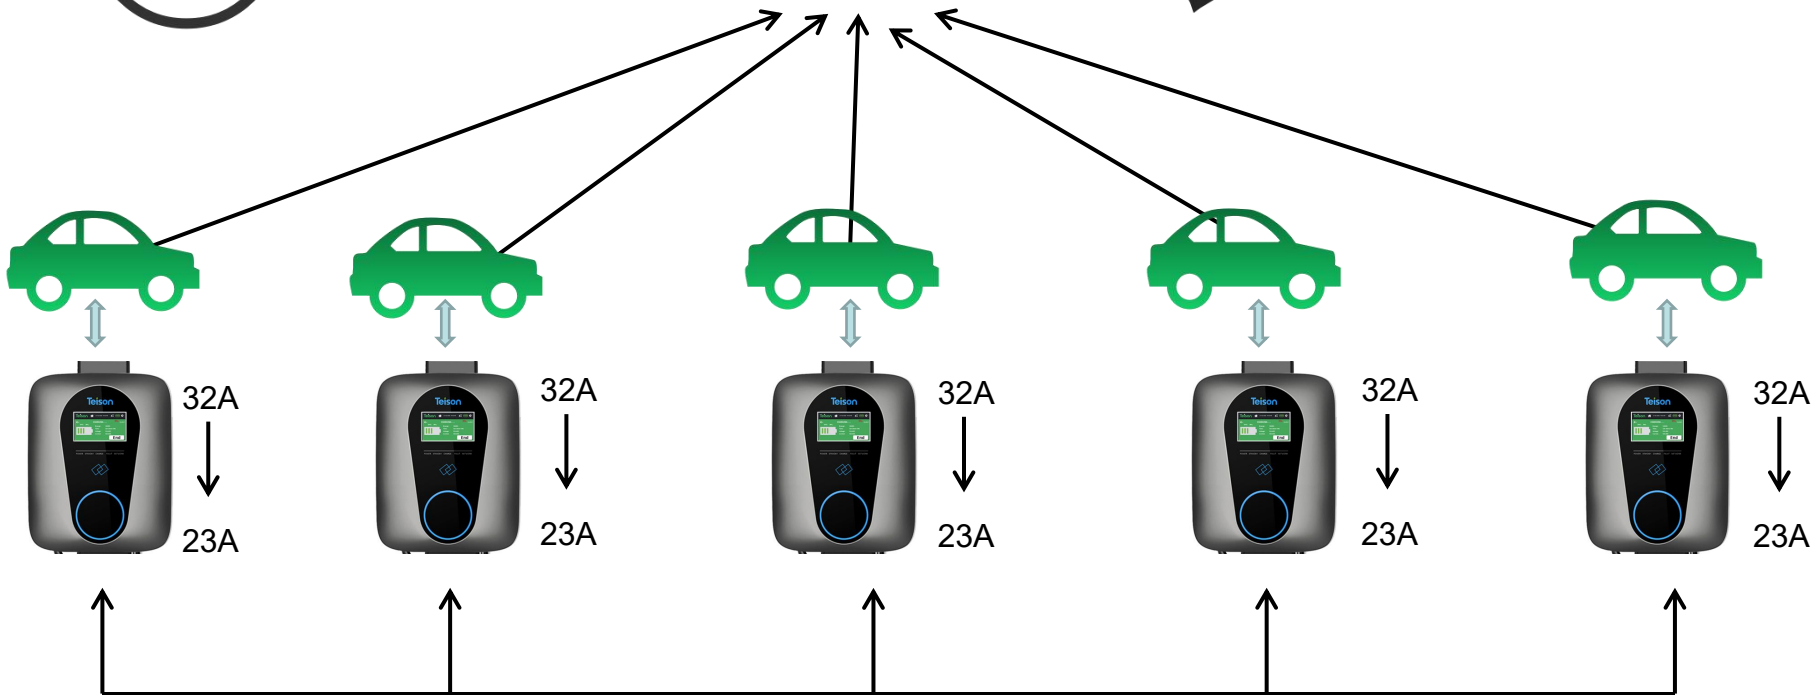

Description:
When 5 cars come to charge, the charger will change reduce to 23A automatically.



Junction Box (Control
Dynamic load balance)
(Maximum charger: 20pcs)